HOW TO INSTALL AND REMOVE THE CHINBAR

INSTALL THE CHINBAR

Place helmet on head and secure the chinstrap. Grasp the chinbar with both hands, and rotate the front upwards 30 degrees.



Place index fingers on steel buttons on each side of chinbar. Feel for positioning bumps on helmet shell and gently insert steel buttons into shell.



Once in position, place one hand on the back of the helmet and press chinbar in with other hand until you hear two distinct clicks.



Rotate chinbar down until you hear two distinct clicks.



REMOVE THE CHINBAR

Grasp chinbar with both hands where it connects to the helmet.



Press chinbar buttons with your thumbs to release and rotate chinbar upwards.



Pull chinbar up and away to disengage it from the helmet.



